



SMART 2.17" WI-FI TEMPERATURE SENSOR

ATK-STH3-WD


INSTRUCTION MANUAL

EN



Read this manual carefully before use,
and retain it for future reference.

3. After connect WiFi successfully, click the sensor icon to enter the app interface and do some setting. You can preset the value of temperature and humidity for alarming from here.

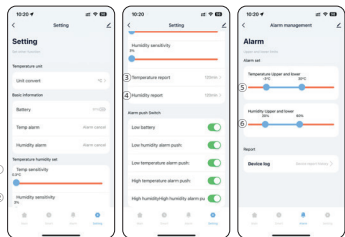

Product parameter

Size: 55*55*24mm

Input voltage: DC4.5V LR03*3

Quiescent current: $\leq 30\mu A$

Low power undervoltage: $\leq 2.7V$

WiFi: 802.11b/g/n 2.4GHz

Working temperature: $-10^{\circ}C \sim 55^{\circ}C$


Working humidity: 10%~90%RH

①② Temperature/humidity sensitivity:
Sensor temperature/humidity value will synchronization to app when upper/lower preset temperature/humidity value. For example, now the temperature is $28^{\circ}C$ and humidity is 70%, the temperature/humidity sensitivity is $+0.6^{\circ}C/6\%$, then the sensor temperature/humidity value will synchronization to app when temperature/humidity is $28.6^{\circ}C$ or $27.4^{\circ}C/76\%$ or 64%.
(Factory default: temperature sensitivity is $0.6^{\circ}C$, humidity sensitivity is 6%).


③④ Temperature/humidity report cycle: Time setting of sensor temperature and humidity value synchronization to app. (Factory default is 120 minutes).

⑤⑥ Temperature/humidity upper and lower limits are set: This setting of the temperature / humidity range.

Device Description

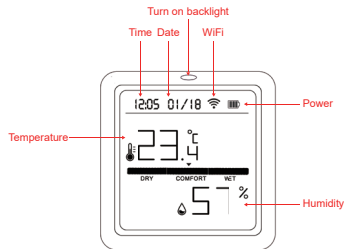

4. Intelligent Linkage
When the ambient environment change, you can do intelligent linkage. For example, the air conditioner will be on automatically when the room temperature surpass $35^{\circ}C$. And the humidifier will spray when the humidity is lower than 20% RH.

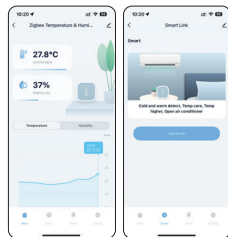


How to set up:

1. First scan QR code with your smartphone, or search "Antik SmartHome" app in Google Play Store or APP Store to download and install app.
2. Register the app with email address.



Bluetooth mode: First turn on the bluetooth in mobile phone \rightarrow open smart life app and choose " + " \rightarrow press and hold the sensor with 5 seconds \rightarrow the WiFi icon will indicate on sensor display. Then will see "Devices to be added: 1" on mobile app. Finally press "Go to add", it will connect the Wi-Fi network automatically.

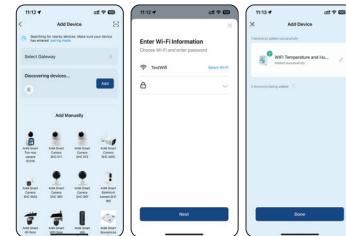

5. Share devices
You can share your added devices with your family members, so they can also monitor the ambient environment.

6. Screen on Sensor
You can do real-time monitor the temperature and humidity on the screen directly.

7. Temperature Unit Selection in APP
You can choose 'C' or 'F' as the temperature unit through app.

8. Third-party Voice Control
Works with amazon alexa, google assistant.

ANTIK Technology
Carskeho 10, 04001 Kosice
Slovakia (European Union)
www.antiktech.com

Manufactured in P. R. C.



ANTIK**SMART
2.17" WI-FI
TEMPERATURE SENSOR****ATK-STH3-WD**


NÁVOD NA POUŽITIE

SK



Pred použitím si tento návod pozorne prečítajte a uschovajte ho pre budúce použitie.

3. Po úspešnom pripojení k Wi-Fi kliknite na ikonu senzora, čím vstúpite do rozhrania aplikácie a môžete vykonať nastavenia. Odtiaľto môžete prednastaviť hodnoty teploty a vlhkosti pre alarm.

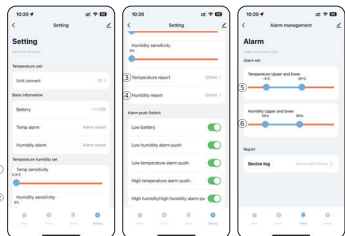**Technické špecifikácie**

Rozmery: 55 × 55 × 24 mm

Vstupné napätie: DC 4,5 V (LR03 × 3)

Kľudový prúd: ≤ 30 μA

Nízke napätie pri vybitých batérii: ≤ 2,7 V

WiFi: 802.11b/g/n 2,4 GHz


Prevádzková teplota: -10 °C až 55 °C

Prevádzková vlhkosť: 10 % až 90 % RH


①② Citlivosť na teplotu/vlhkosť: Hodnota teploty/vlhkosti zo senzora sa synchronizuje s aplikáciou, keď prekročí nastavenú hornú alebo dolnú hranicu. Napríklad: aktuálna teplota je 28 °C a vlhkosť 70 %. Citlivosť na teplotu/vlhkosť je ±0,6 °C / ±6 %, takže hodnota sa synchronizuje s aplikáciou, keď teplota dosiahne 28,6 °C alebo 27,4 °C, a vlhkosť 76 % alebo 64 %.

③④ Interval hlásenia teploty/vlhkosti: Nastavenie času synchronizácie hodnôt teploty a vlhkosti zo senzora do aplikácie. (Továrnske nastavenie je 120 minút)

⑤⑥ Nastavenie horných a dolných limitov teploty/vlhkosti: Nastavenie požadovaného rozsahu pre teplotu a vlhkosť.

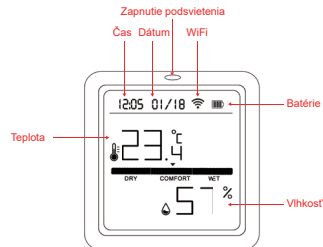Popis zariadenia

4. Inteligentné prepojenie
Keď sa zmení okolitá teplota alebo vlhkosť, môžete využiť inteligentné prepojenie zariadení. Napríklad: klimatizácia sa automaticky zapne, keď teplota v miestnosti presiahne 35 °C. Zvlhčovač začne rozprašovať, keď vlhkosť klesne pod 20 % RH.

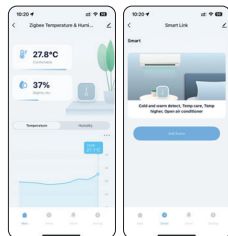**Ako nastaviť zariadenie:**

1. Najskôr naskenujte QR kód pomocou svojho smartfónu, alebo si vyhľadajte aplikáciu „Antik SmartHome“ v obchode Google Play alebo App Store, a stiahnite si ju a nainštalujte.

2. Zaregistrujte sa v aplikácii pomocou e-mailovej adresy.




5. Zdieľanie zariadení
Svoje pridané zariadenia môžete zdieľať s členmi rodiny, aby aj oni mohli monitorovať okolitú teplotu a vlhkosť.

6. Displej na senzore
Teplotu a vlhkosť môžete sledovať v reálnom čase priamo na displeji senzora.

7. Výber teplotnej jednotky v aplikácii
V aplikácii si môžete zvoliť teplotnú jednotku °C alebo °F.

8. Hlasové ovládanie od tretích strán
Kompatibilné s Amazon Alexa a Google Assistant.

Režim Bluetooth: Najskôr zapnite Bluetooth v mobilnom telefóne → otvorte aplikáciu Smart Life a vyberte možnosť „+“ → stlačte a podržte senzor po dobu 5 sekúnd → na displeji senzora sa zobrazí ikona Wi-Fi. Následne sa v mobilnej aplikácii zobrazí hlásenie „Zariadenia na pridanie: 1“. Nakoniec stlačte „Pridať“, zariadenie sa automaticky pripojí k Wi-Fi sieti.

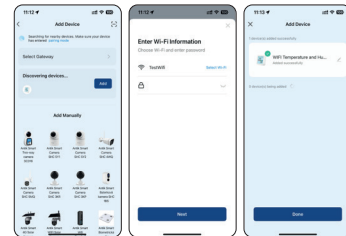

ANTIK Technology
Carskeho 10, 04001 Kosice
Slovakia (European Union)
www.antiktech.com

Manufactured in P. R. C.

